




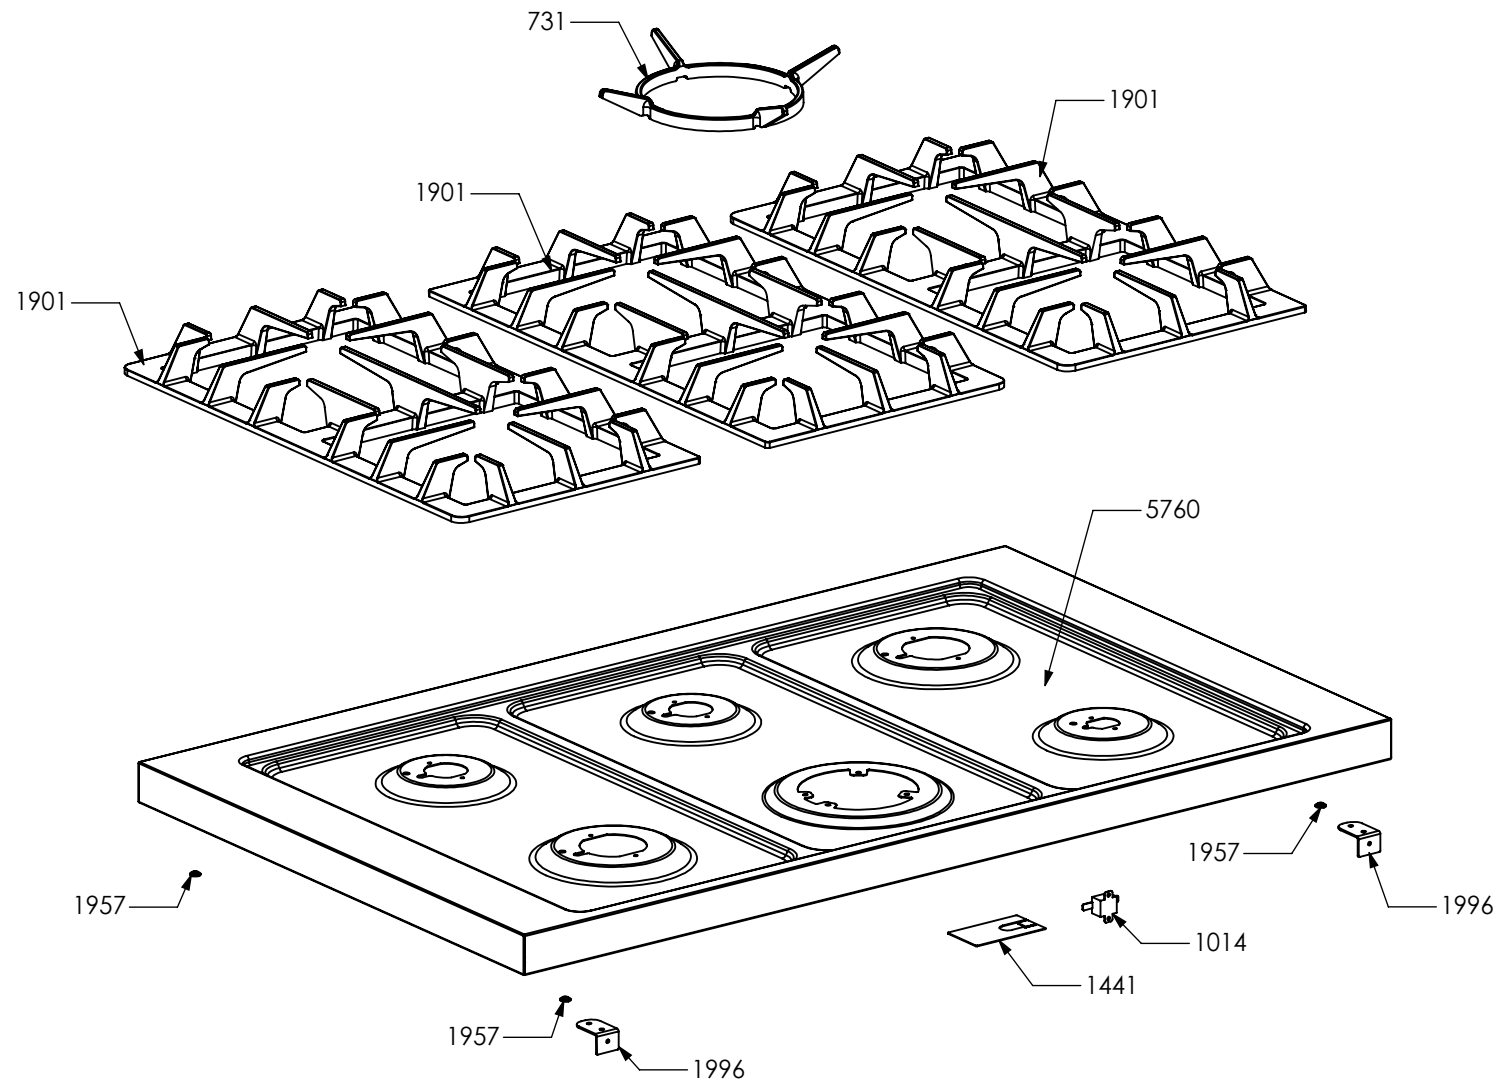


N° Object	Code	Description	Qty
731	ZS0565	Cast-iron grid for wok	1
1014	ZS2026	Thermostat TY60 N.O. fixing B	1
1441	ZS2665	Support for fan timelag device	1
1901	ZS2700	Cast-iron grid 2 burners Prt / Drb	3
1957	ZS3495	Washer 4.3 x 10 x 3	4
1996	ZS3171	Blocking plate hob-side Party	2
5760	ZP0075	Complete cooktop 6 burners for cooker 100 double oven	1

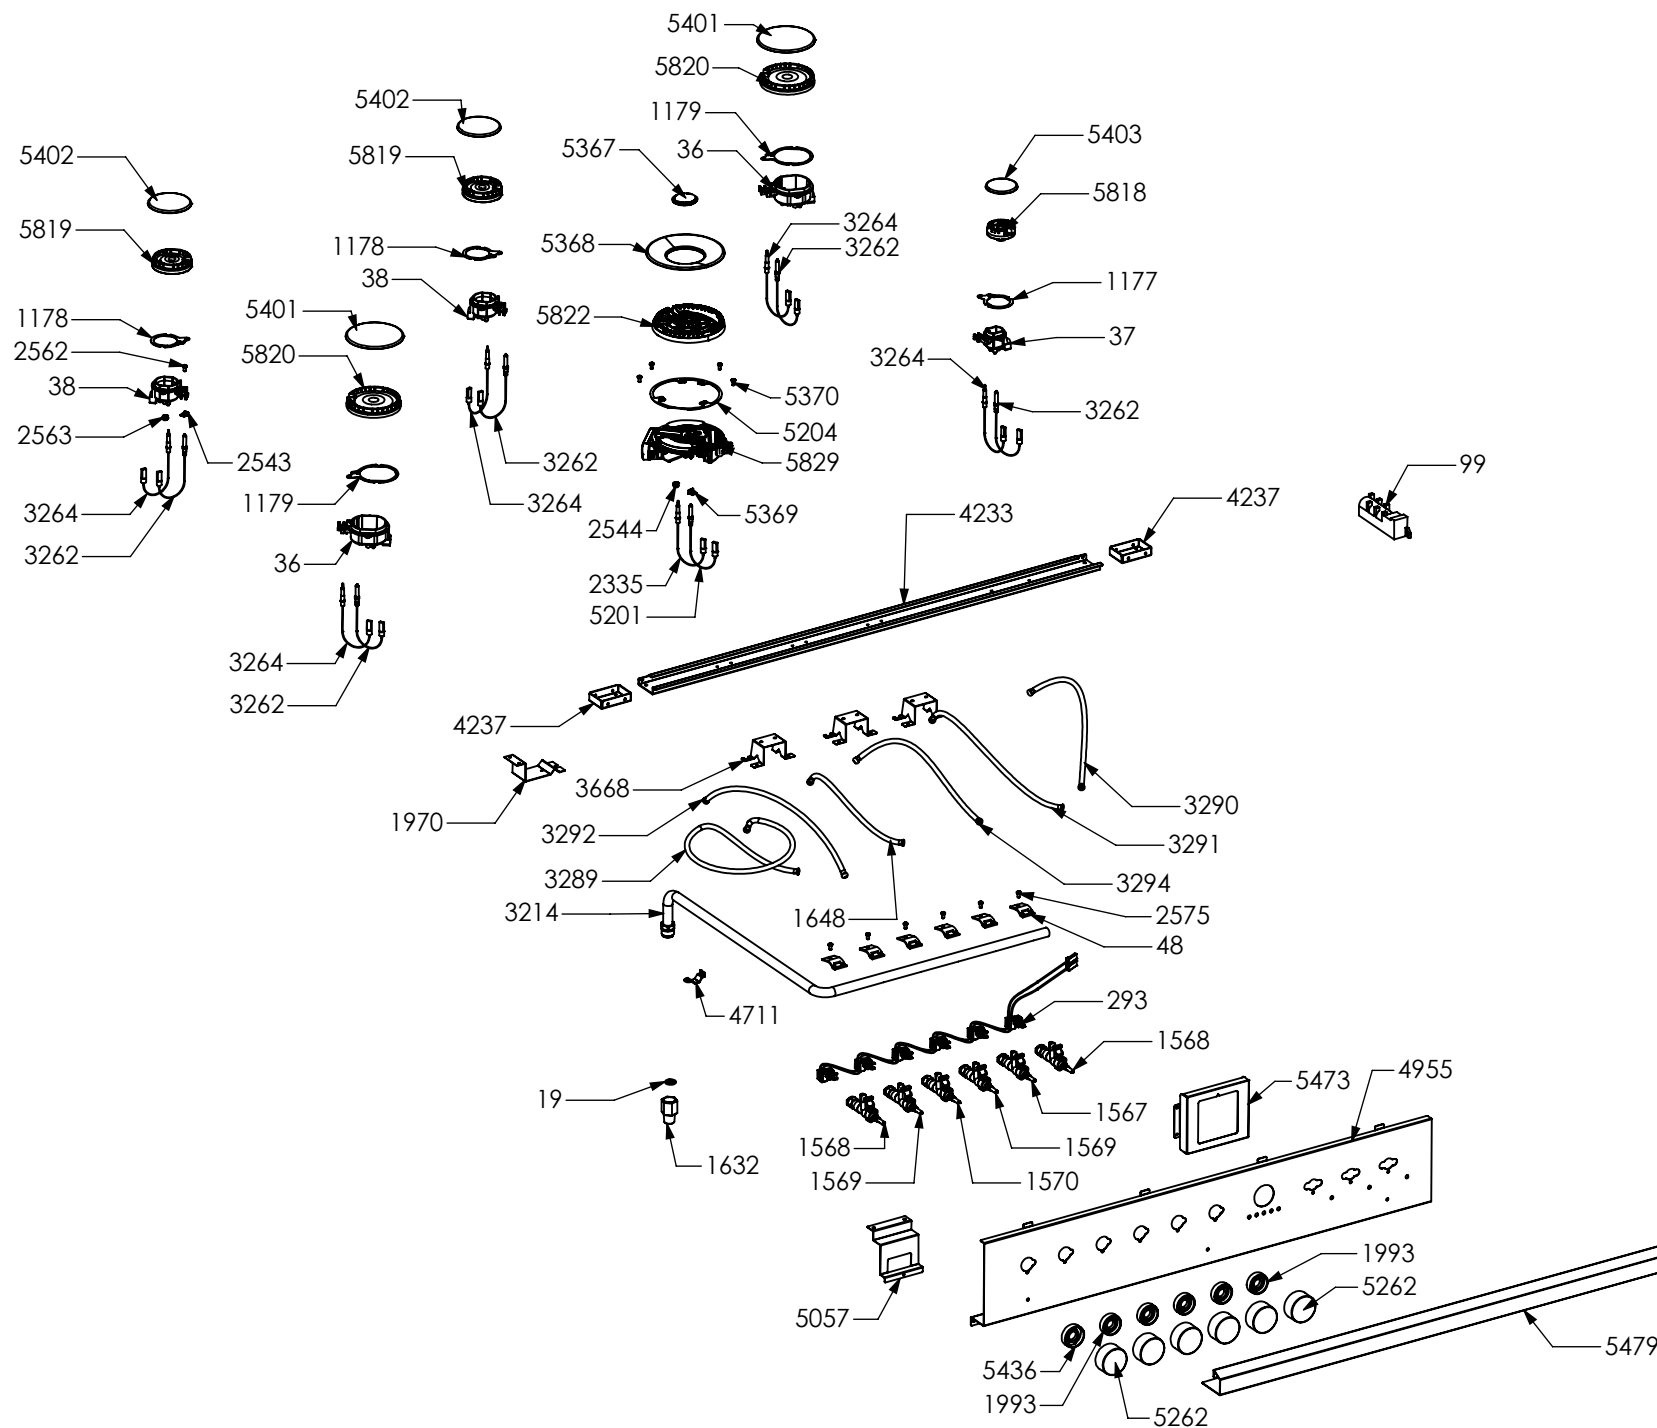

N° Object	Code	Description	Qty	N° Object	Code	Description	Qty
19	400689	Gasket gas inlet	1	3290	ZS5350	Pipe ramp for rear right rapid burner cooker 100 DC Prt/Drb	1
36	414157	Rapid burner body G25 1,21	2	3291	ZS5351	Pipe ramp for front right semi-rapid burner cooker 100 DC Prt/Drb	1
37	414158	Auxiliary burner body G25 0,72	1	3292	ZS5352	Pipe ramp for rear left semi-rapid burner cooker 100 DC Prt/Drb	1
38	414159	Semi rapid burner body G25 0,94 (fish-kettle G20)	2	3294	ZS5354	Pipe ramp for rear centre s-rap burner cooker 100 DC Prt/Drb	1
48	421323	Gas taps fixing bridle M60	6	3668	ZS5778	Ramp fixing support 90/100 Prt / Drb	3
99	481918	Ignition system 6 flames	1	4233	ZS6611	Support bar taps ramp cooker 100	1
293	ZS0578	Micro catenary for 6 burners	1	4237	ZS6695	Clamp for support bar taps ramp	2
1177	ZS2217	Gasket for auxiliary burner	1	4711	ZS6772	Clamp support for main ramp	7
1178	ZS2218	Gasket for semi-rapid burner	2	4955	GR8480	Assembly control panel front 6 burners electric oven ADG 100 DC S.Steel serygr.	1
1179	ZS2219	Gasket for rapid burner	2	5473	ZS8278	Display support	1
1567	ZS2923	Valved tap for auxiliary burner (bypass 0,27)	1	5057	ZS7833	Clamp support for control panel cooker Party	1
1568	ZS2924	Valved tap for rapid/fish-kettle burner	2	5201	ZS8191	Wok burner spark plug sbf DCC M+G INT	1
1569	ZS2925	Valved tap for semi-rapid burner	2	5204	ZS8194	Gasket for wok burner	1
1570	ZS2926	Valved tap for triple-ring burner	1	5262	ZS8311	Neutral knob ADG	6
1632	ZS3021	Adapter female-male 1/2 BSP 04	1	5367	ZS8632	Plate central Wok burner	1
1648	ZS3069	Pipe ramp for front central semi-rapid burner for cooker 100 05	1	5368	ZS8633	Plate Wok burner external	1
1970	ZS3656	Rear ramp fixing support cooker 90 Party	1	5369	ZS8634	Spring fixing spark plug for Wok	1
1993	405508	Bezel cooker 196 xxl	5	5370	ZS8635	Screw M4 wok burner	4
2335	ZS4181	Thermocouple SBF L=750 TC	1	5401	ZS8684	Plate rapid burner HE2	2
2543	601229	Spring fixing spark plug for triple ring P-4	5	5402	ZS8685	Plate semi-rapid burner HE2	2
2544	ZS4186	Fixing nut for thermocouple burner 4.5	1	5403	ZS8686	Plate auxiliary burner HE2	1
2562	506037	Screw M3x8 TC s.steel	10	5436	ZS8802	Bezel cooker 196 xxl with hole	1
2563	ZS0907	Fixing nut for themocouple	5	5479	ZS8364	Frontal bar profile cooker 100 polished	1
2575	505241	Screw M4	6	5818	ZS8625	Auxiliary burner flame spreader HE2 ALU	1
3214	ZS3116	Ramp 6 burners FE cooker 100 DC Prt/Drb	1	5819	ZS8627	Semi-rapid burner flame spreader HE2 ALU	2
3262	ZS5270	Burner spark plug Cast	5	5820	ZS8629	Rapid burner flame spreader HE2 ALU	2
3264	ZS5272	Thermocouple Cast L=770	5	5822	ZS8639	Wok burner flame spreader ALU	1
3289	ZS5349	Pipe ramp for front left rapid burner cooker 100 DC Prt/Drb	1	5829	ZS8823	Wok burner body G25/25 1.35	1

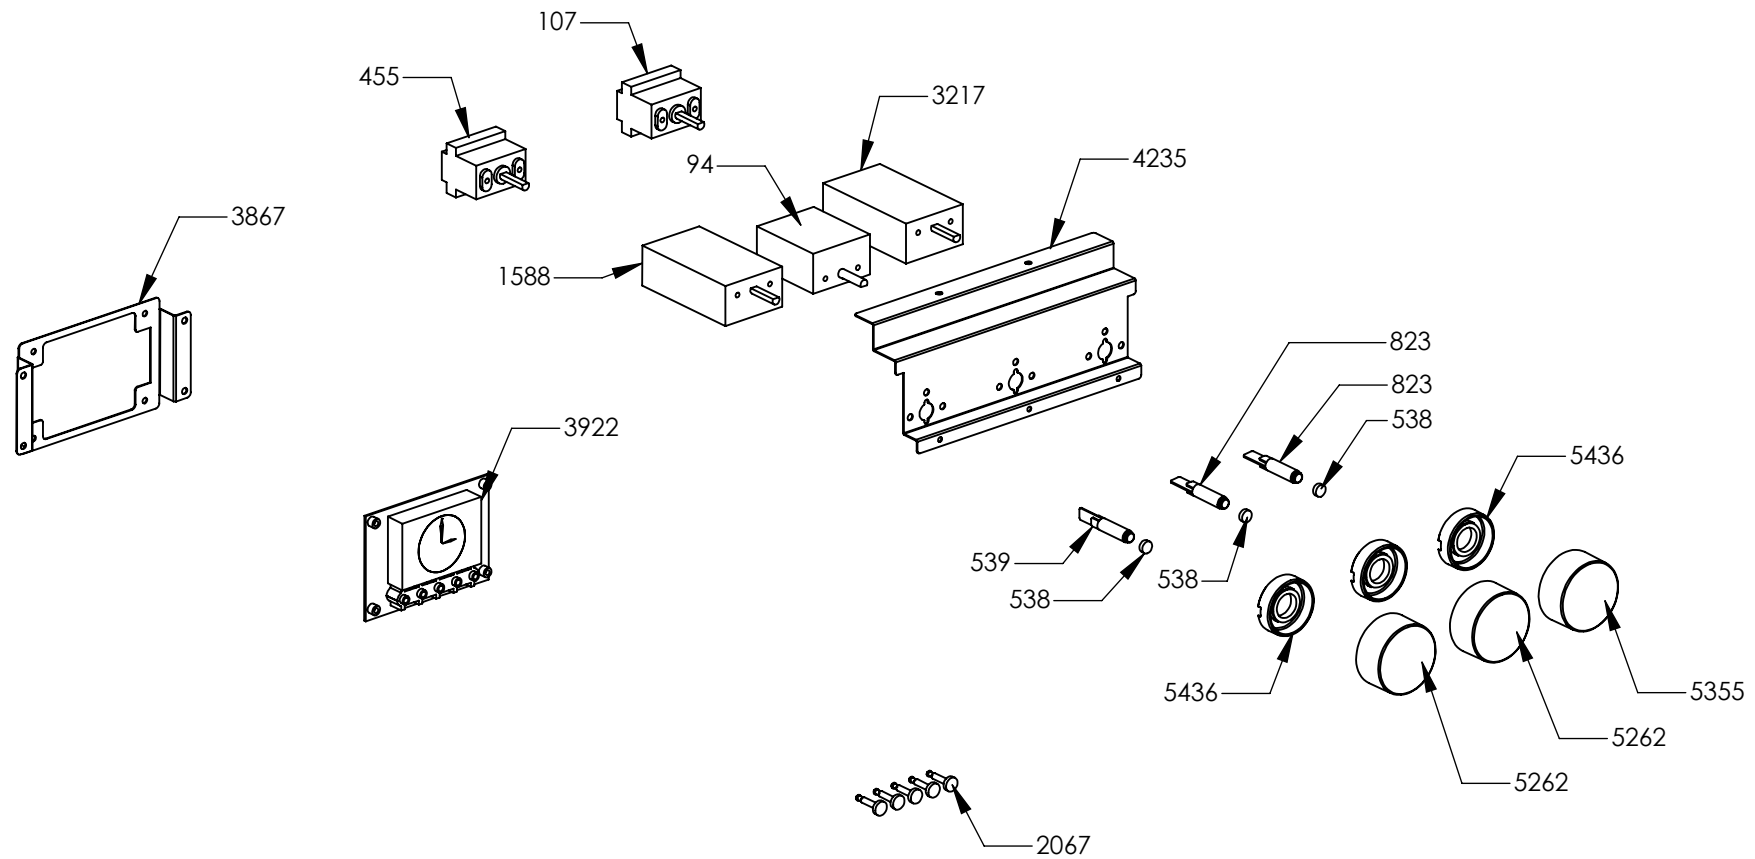

N° Object	Code	Description	Qty
94	481814	Commutator multif. for 90 built-in oven(no pizza)	1
107	482120	Thermostat cooker 192	1
455	ZS1075	Oven thermostat	1
538	ZS1204	Led transparent	3
539	ZS1205	Fluorescent green warning light	1
823	ZS1755	Fluorescent orange warning light	2
1588	ZS2889	Commutator oven functions 90 EGO	1
2067	ZS3785	Knob for timer gray	5
3217	ZS4568	Commutator oven functions 30 EGO	1
3867	ZS6012	Electrical display support	1
3922	ZS6184	Timer (white led) LCD-ELA 1000	1
4235	ZS6613	Commutator support 3 positions	1
5262	ZS8311	Neutral knob ADG	2
5355	ZS8569	Neutral knob ADG with "L"	1
5436	ZS8802	Bezel cooker 196 xxl with hole	3

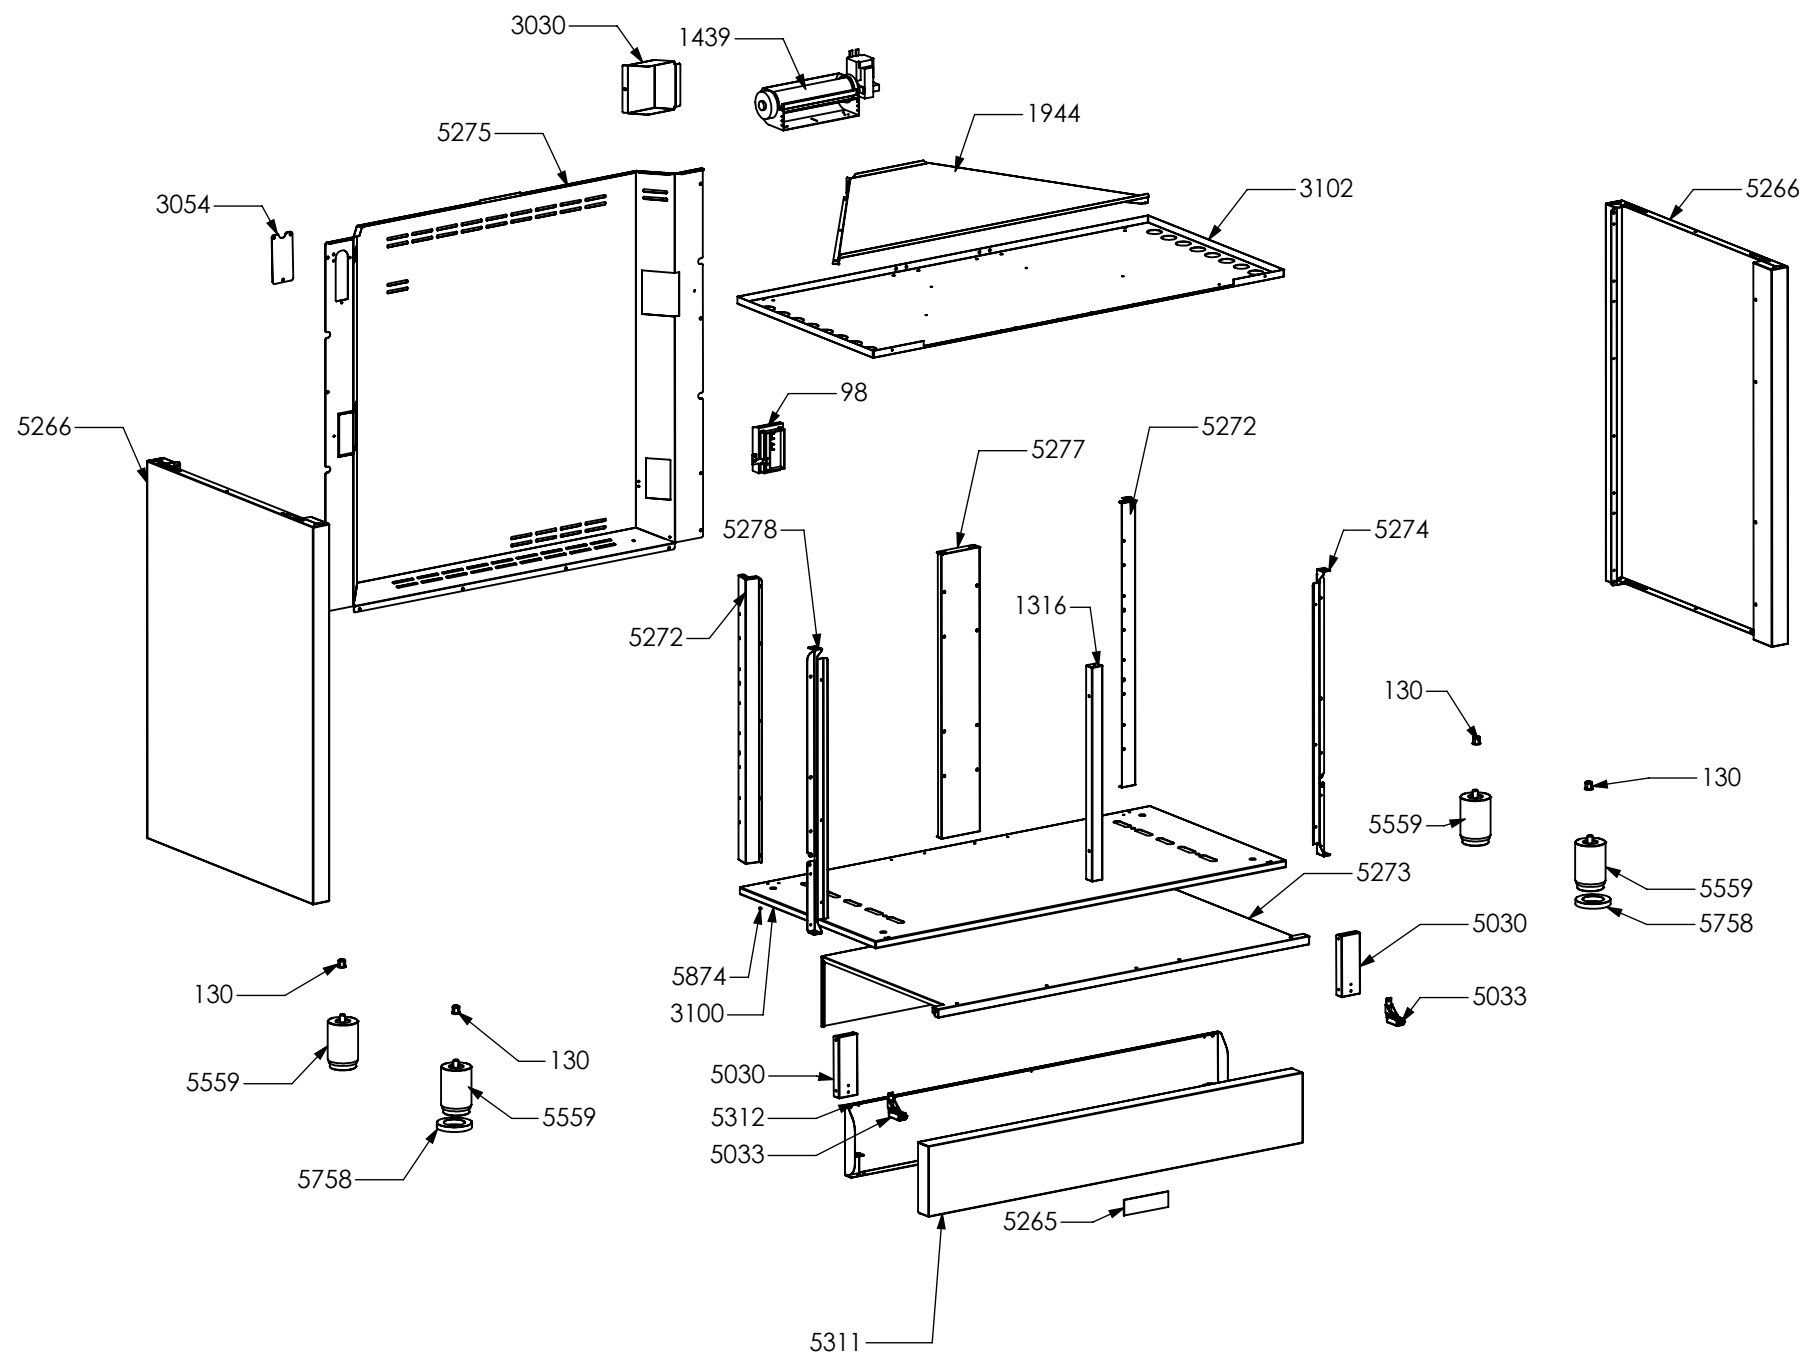

N° Object	Code	Description	Qty
98	481913	Terminal board for oven 32 PA 233	1
1316	ZS2474	Front central muffle support cooker 100/120 double oven	1
1439	ZS2663	Cooling fan L=180 Plaset (AU)	1
1944	ZS2719	Air conveyor for cooktop 090/100 Prb/Drb	1
3030	ZS3312	Blocking plate hob-side Prt/Drb	2
3054	ZS5128	Ramp hole closing plate	1
3102	ZS2749	Muffle fan guard cooker 100 double oven Prt / Drb	1
5030	ZS7491	Hinge support 100 DC Prt/Drb	2
5033	ZS7657	Door hinge for drawer door	2
5265	ZS8327	"Lancellotti" plate	1
5266	ZS8337	Side external right/left lower ADG S.STEEL	2
5272	ZS8346	Rear support for muffle left/right side cooker 100 double oven	2
5273	ZS8347	Upper guard for drawer 100	1
5274	ZS8348	Front support for muffle Right side 100 double oven cooker	1
5275	ZS8349	Rear guard for cooker 100 double oven Prt / Drb	1
5277	ZS8361	Rear central support for muffle cooker 100 double oven Prt/Drb	1
5278	ZS8362	Front support for muffle Left side 100 double oven cooker	1
5311	ZS8459	Drawer door cooker 100 ADG s.steel	1
5312	ZS8460	Counterdoor drawer cooker 100 DC ADG	1
5559	ZA0059	Adjustable feet H100/145 inox ADG	4
5758	ZP0073	Ring for feet	2
5874	GR2746	Assembly complete lower reinforcement 100	1
130	601156	Tapping screw M10 galvanized	4
3100	ZS2746	Lower guard for cooker 100 double oven Party	1

4981

1334

2937

5384

1277

2943


1277

2938

2944


3765

N° Object	Code	Description	Qty
4981	GR8658	Assembly glued oven door ADG 60/100 double oven	1
2937	GR4313	Assembly door 30/60/90 right bar profile 07	1
2938	GR4314	Assembly door 30/60/90 left bar profile 07	1
1334	ZS2308	Inner glass oven door 60	1
1277	ZS2414	Door hinge for oven 60 G	2
2943	ZS4746	Right support for inner glass	1
2944	ZS4747	Left support for inner glass	1
3765	ZS6090	Door oven handle for oven 60 BOSCH	1
5384	ZS8665	Glued external oven door 60/100 double oven	1

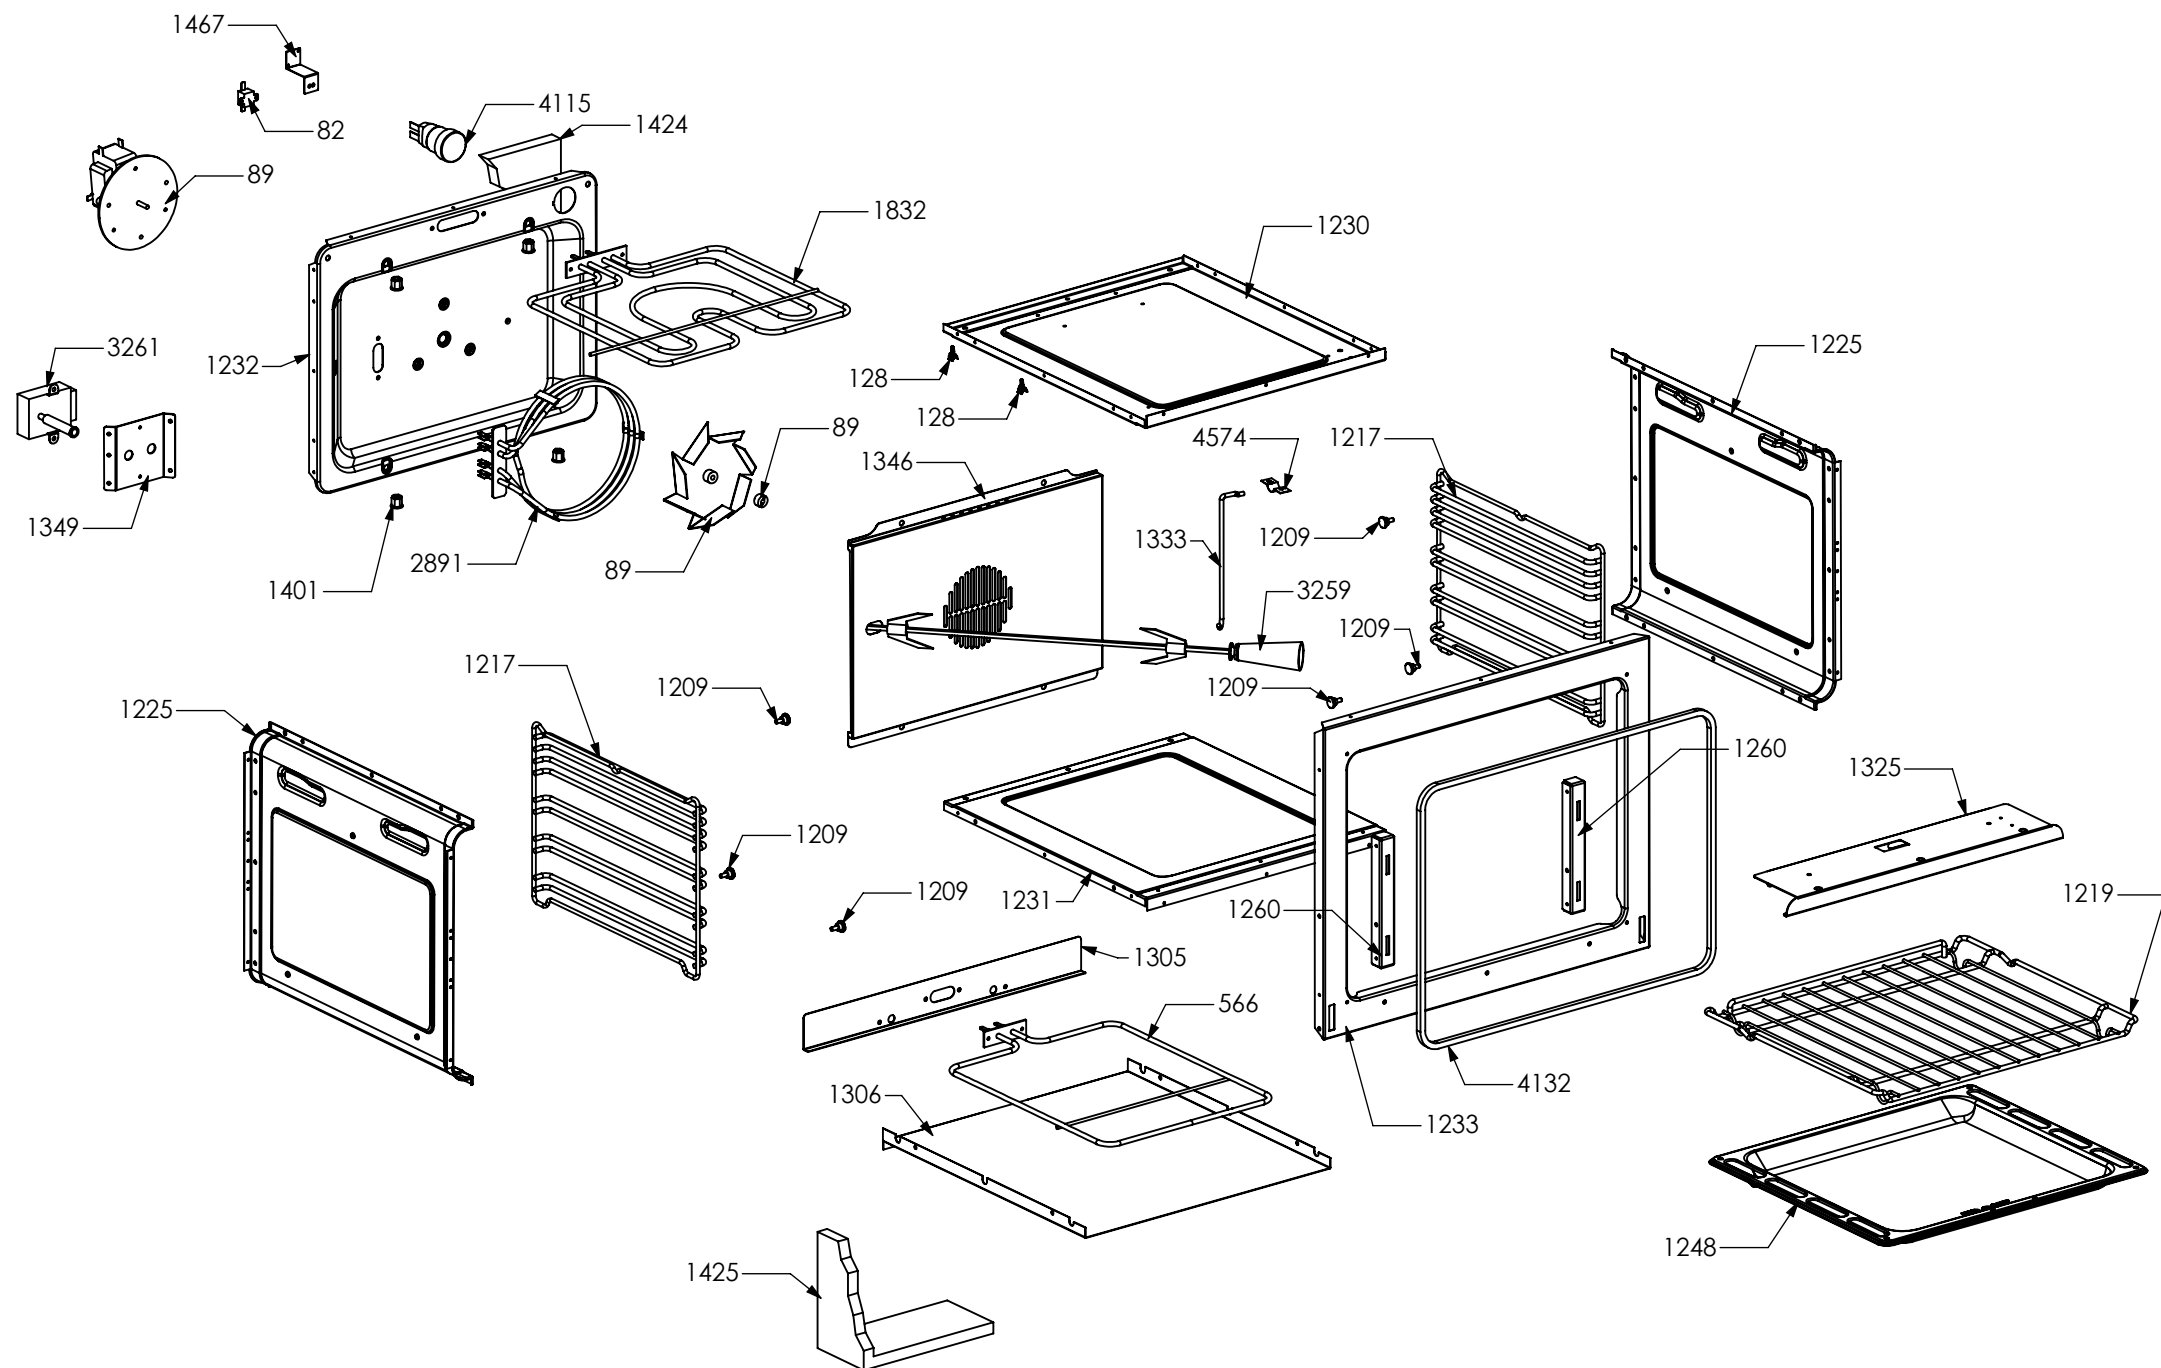

N° Object	Code	Description	Qty	N° Object	Code	Description	Qty
82	481403	Thermoswitch 16 Ampere	1	4115	ZS6631	Complete Lamp-holder for oven (max 25 W)	1
89	481727	Circular tangential oven 90 fan (AU) with fan and nut	1	4132	ZS6541	Gasket oven 60 H=8.9 mat HT	1
128	601152	Spring fixing feeler for built-in oven	2	4574	ZS6005	Fixing support for turnspit motor oven 60/90	1
566	ZS7590	Lower heating element for oven 60 (1200W/230V)	1				
1209	414559	Lateral frame support for built-in oven	6				
1217	ZS2283	Oven lateral frame 30/60/90	2				
1219	ZS2286	Chromed wire grid for oven 60	1				
1225	ZS2312	Side muffle oven 30/60/90 enamelled 04	2				
1230	ZS2322	Enamelled muffle ceiling oven 60	1				
1231	ZS2324	Enamelled muffle bottom for oven 60	1				
1232	GR2326	Assembly rear muffle oven 60 enamelled 04	1				
1401	ZS2585	Tapping screw M5 aluminium	4				
1233	ZS2328	Enamelled muffle front side oven 60	1				
1248	ZS2364	Enamelled drip tray for oven 60	1				
1260	ZS2395	Hinge support 06	2				
1305	ZS2456	Lower heating elem.support oven 60 double oven 04	1				
1306	ZS2459	Lower heating element tray oven 60 04	1				
1325	ZS2496	Grill heating element support for muffle oven 60 enamelled 04	1				
1333	ZS2289	Support for grillrod 60/90	1				
1346	ZS2484	Fan cover for oven 60 with turnspit hole BLACK	1				
1349	ZS2499	Fixing support for turnspit motor oven 60/90	1				
1424	ZS2629	White glass wool for rear side 60 oven 04	1				
1425	ZS2632	White glass wool for 60 oven 04	1				
1467	ZS2604	Support for safety thermostat 04	1				
1832	482094	Grill heating element for oven 60 (1900+850W)	1				
2891	482589	Circular heating element 230V-2100W	1				
3259	ZS5174	Turnspit for oven 60 (4 forks + handle) - 04	1				
3261	ZS5236	Turnspit motor reducer 50/60 Hz	1				

4980

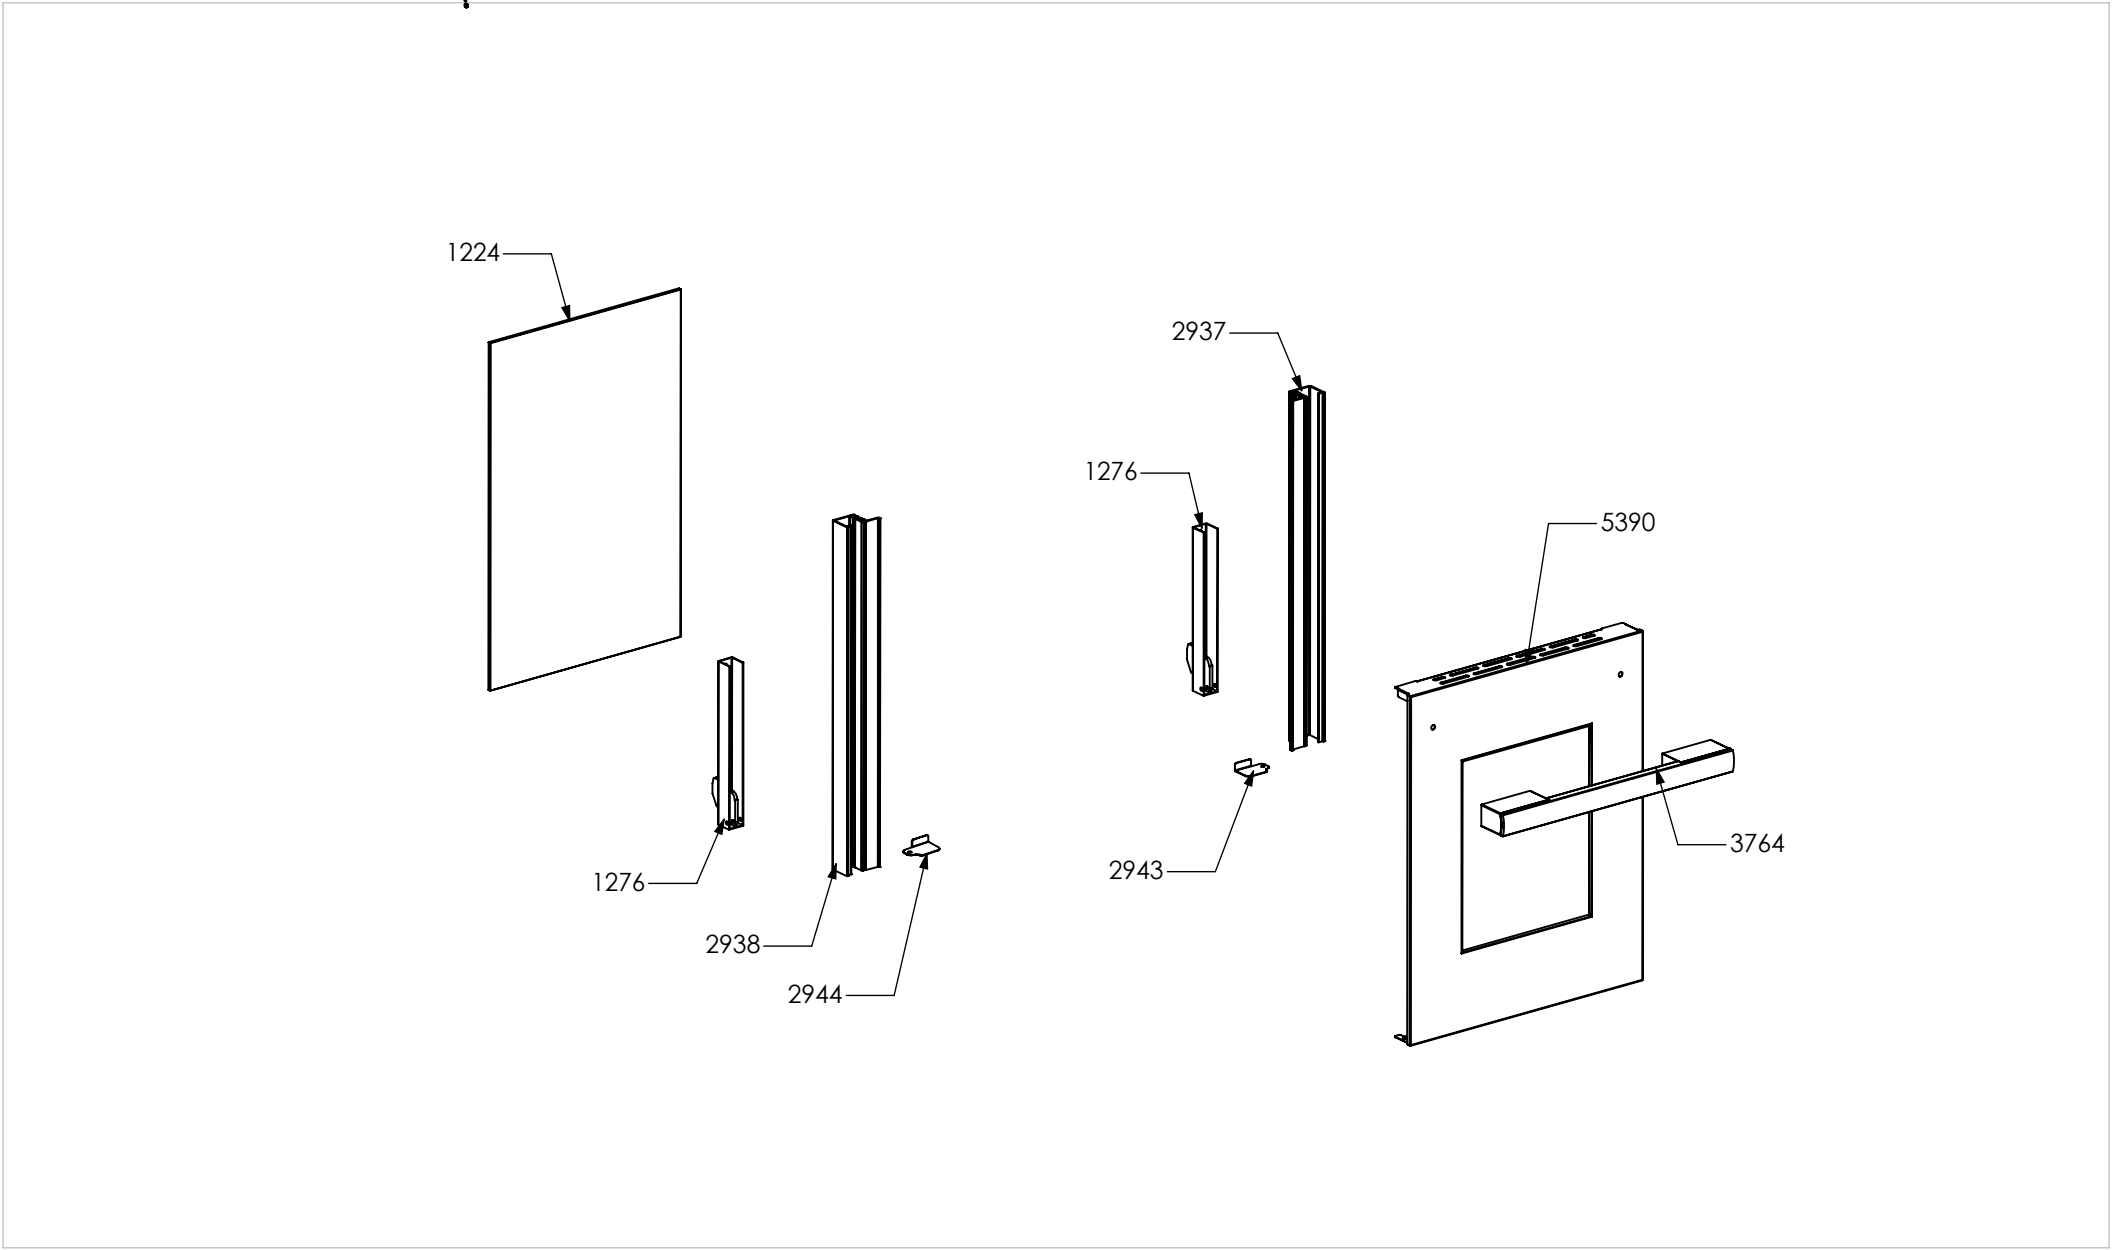

This technical drawing illustrates the assembly of a kitchen door. It includes an exploded view of the door panel (1224) and its internal components, as well as a perspective view of the fully assembled door. The exploded view shows the panel (1224) with a top edge (4980) and a bottom edge (2938). The internal components include a vertical support (2937), a horizontal support (2943), and a handle (3764). The assembled view shows the door panel (1224) with the handle (3764) and the vertical support (2937) installed. The horizontal support (2943) is shown in the exploded view, and the handle (3764) is shown in the assembled view. The vertical support (2937) is shown in the exploded view, and the handle (3764) is shown in the assembled view. The horizontal support (2943) is shown in the exploded view, and the handle (3764) is shown in the assembled view.

1224

2937

1276

5390

1276


2938

2944

2943

3764

N° Object	Code	Description	Qty
4980	GR8657	Assembly glued oven door 30 Adg	1
2937	GR4313	Assembly door 30/60/90 right bar profile 07	1
2938	GR4314	Assembly door 30/60/90 left bar profile 07	1
1224	ZS2311	Inner glass oven door 30	1
1276	ZS2413	Door hinge for oven 30	2
2943	ZS4746	Right support for inner glass	1
2944	ZS4747	Left support for inner glass	1
3764	ZS6089	Door oven handle for oven 30 BOSCH	1
5390	ZS8672	Glued external oven door 30 KL	1

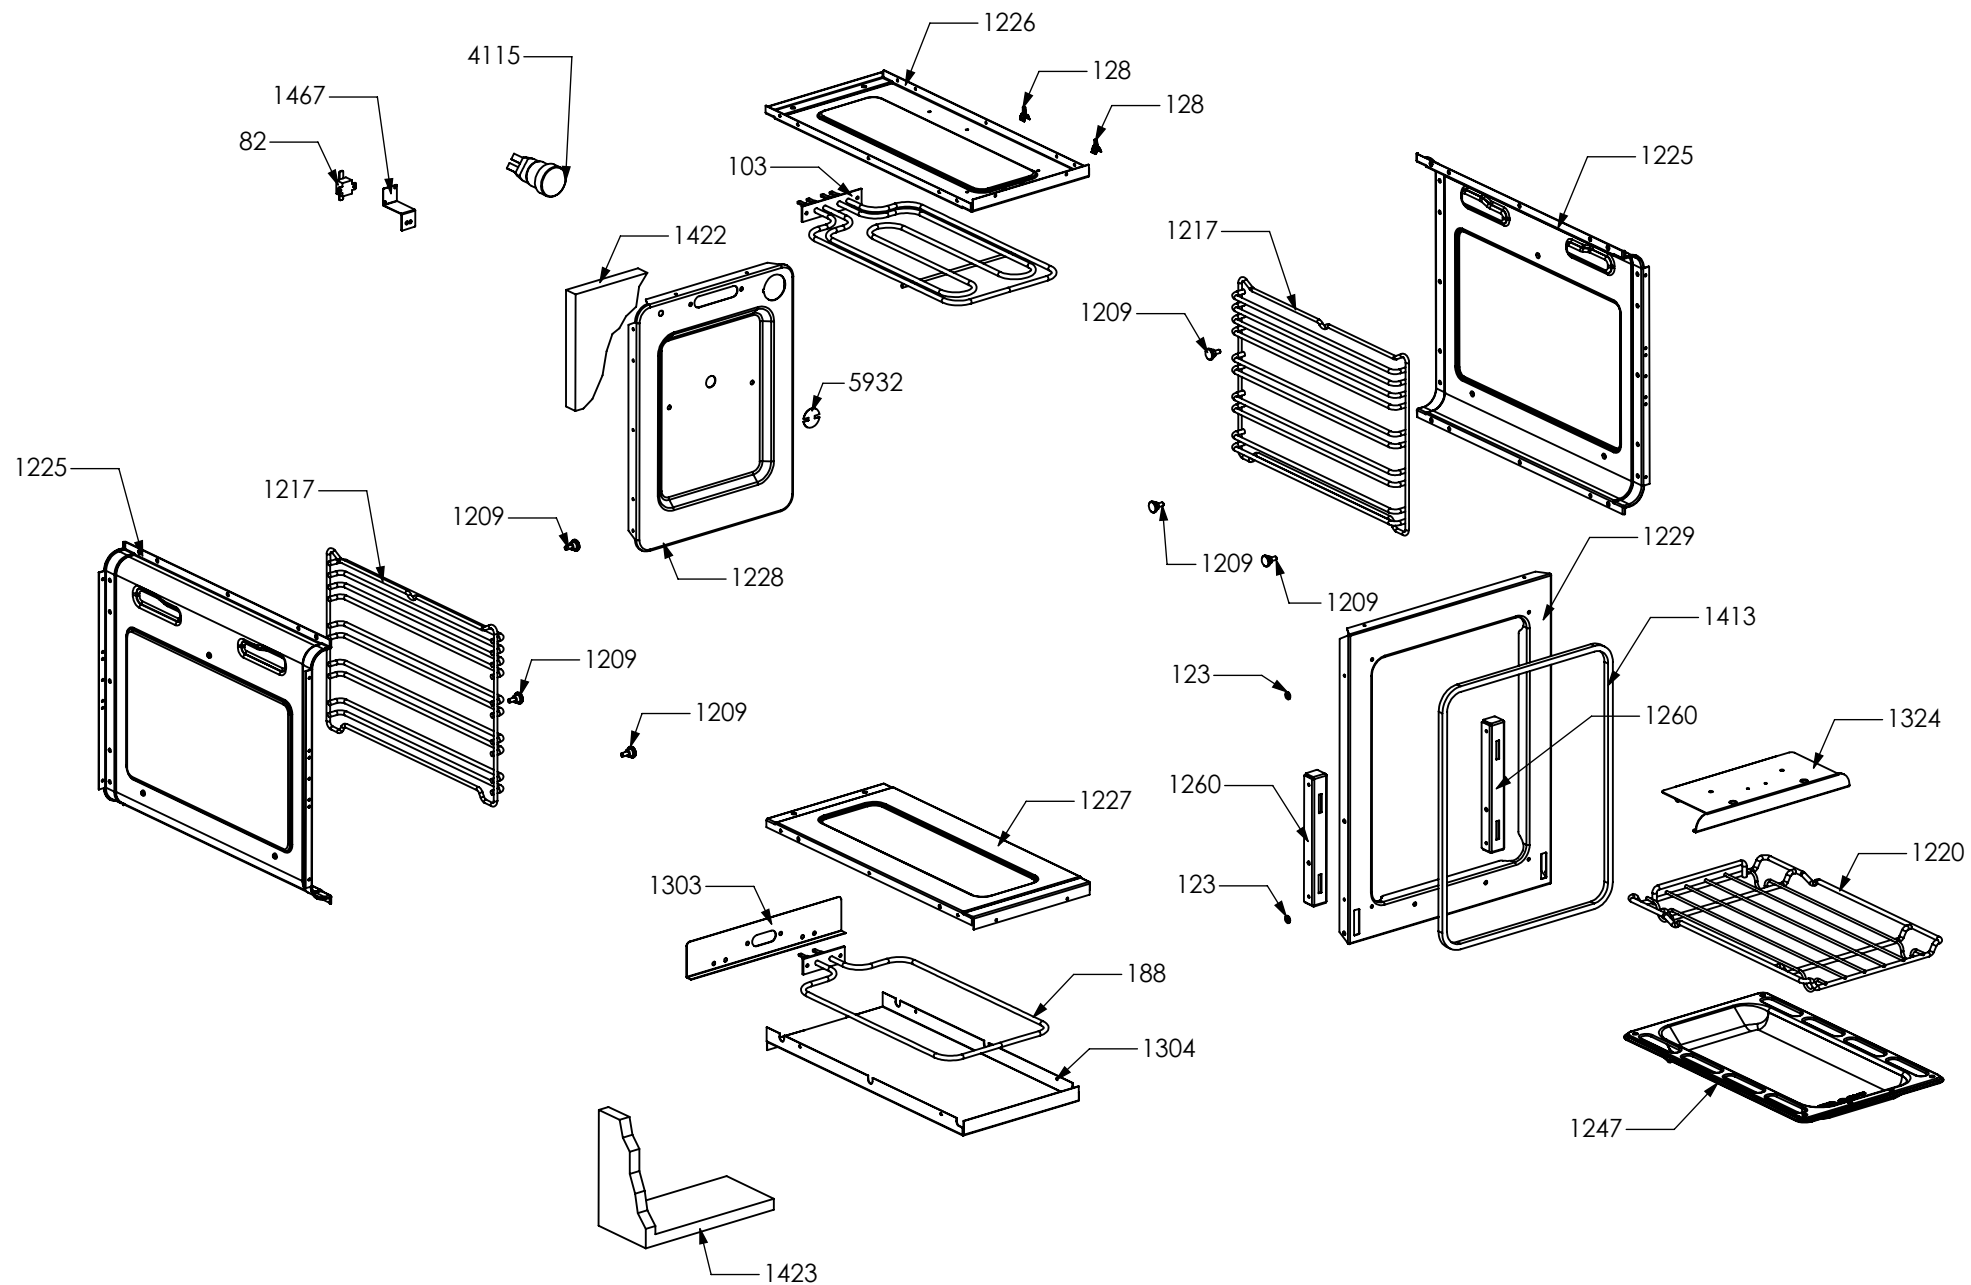

N° Object	Code	Description	Qty
82	481403	Thermoswitch 16 Ampere	1
103	482072	Upper heating element cooker	1
123	541011	Spacer washer for built-in oven	2
128	601152	Spring fixing feeler for built-in oven	2
188	ZS7653	Lower heating element for oven 30	1
1209	414559	Lateral frame support for built-in oven	6
1217	ZS2283	Oven lateral frame 30/60/90	2
1220	ZS2287	Chromed wire grid for oven 30	1
1225	ZS2312	Side muffle oven 30/60/90 enamelled 04	2
1226	ZS2314	Enamelled muffle ceiling oven 30	1
1227	ZS2316	Enamelled muffle bottom for oven 30	1
1228	ZS2318	Muffle rear side oven 30 enamelled 04	1
1229	ZS2320	Enamelled muffle front side oven 30	1
1247	ZS2362	Enamelled drip tray for oven 30	1
1260	ZS2395	Hinge support 06	2
1303	ZS2454	Lower heating elem.support oven 30 04	1
1304	ZS2455	Lower heating element tray oven 30 04	1
1324	ZS2494	Grill heating element support for muffle oven 30 enamelled 04	1
1413	ZS2599	Gasket oven 30 04	1
1422	ZS2627	White glass wool for rear side 30 oven 04	1
1423	ZS2628	White glass wool for 30 oven 04	1
1467	ZS2604	Support for safety thermostat 04	1
4115	ZS6631	Complete Lamp-holder for oven (max 25 W)	1
5932	ZP0119	Turnspit hole cap	1

N° Object	Code	Description	Qty
132	ZS5148	Adhesive tape 16,5 m x 19h (3M)	80
725	601108	Anti-overturning device	0,3
1210	ZS5149	Adhesive tape 33 mt x 17h mm x th 0,6 mm (3M 4930)	200
1586	ZS2770	Additional wiring generic L=75 cm Fem Fem	2
3071	ZS5206	Wiring diagram for cooker P10FF-6	1
4642	ZS5540	Knob spring thickness 1,1 total coils 4 - 3/4	9
5336	ZS8523	Instruction booklet cooker Adagio Lancellotti Multilanguage	1
5939	ZS0957	Spacer between knob and tap	6